
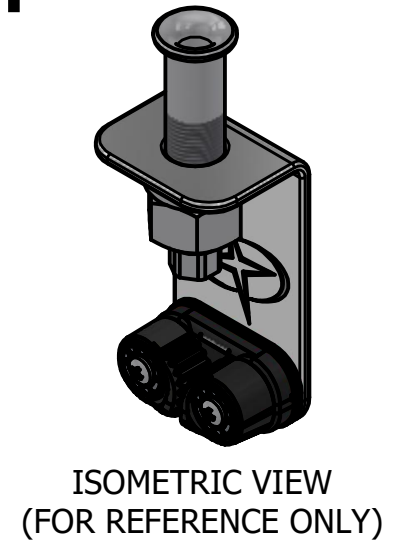
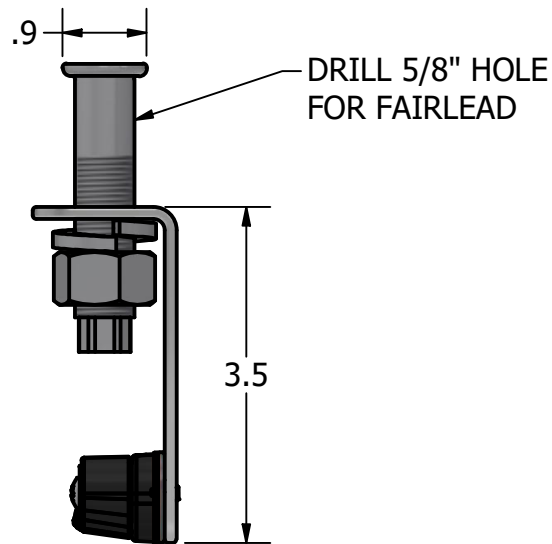
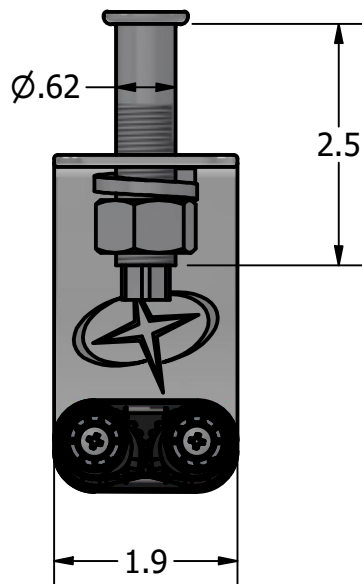


# Marketing Drawing for 74110-CC-KIT

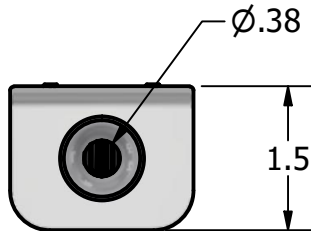

## \*NOTES

1) DRILL 5/8" HOLE IN DESIRED LOCATION. PLACE THE FAIRLEAD IN THE TOP OF THE HOLE AND PUT THE METAL PLATE THROUGH THE HOLE UNDERNEATH FOLLOWED BY THE SPLIT WASHER AND NUT. HOLD THE BACK PLATE IN IT'S DESIRED POSITION AND TIGHTEN NUT UNTIL UNIT IS SECURE.

2) MAXIMUM GUNNEL THICKNESS IS 2".



## Description

FAIRLEAD CAM CLEAT ASSEMBLY

| Size                | Part No      | Units           | Rev | Scale |
|---------------------|--------------|-----------------|-----|-------|
| A                   | 74110-CC-KIT | INCHES          | 0   | 1:2   |
| Phone: 800.874.4506 |              | www.gemplux.com |     |       |